

Trixbox Master Keycodes

- » 8505 Dials into the trixbox Pro Conference Bridge (Call Center Edition, Enterprise Edition).
- » 8506 Dials into the trixbox Pro Conference Bridge (Call Center Edition, Enterprise Edition).
- » 8507 Dials into the trixbox Pro Conference Bridge (Call Center Edition, Enterprise Edition).
- » 8508 Dials into the trixbox Pro Conference Bridge (Call Center Edition).
- » 8509 Dials into the trixbox Pro Conference Bridge (Call Center Edition).
- » 8555 Check the voicemail for the current extension (follow prompts).
- » 8500 Check the voicemail for another extension (follow prompts).
- » *1 Log into ACD queue from an assigned phone (follow prompts).
- » *3 Log out of ACD queue from an assigned phone (follow prompts).
- » *5 Check ACD queue login status.
- » *50 Log into ACD queue and respect call forwarding.
- » *54 Log into ACD queue (follow prompts). Remember *LI = LOG IN.
- » *56 Log out of ACD queue (follow prompts). Specify "#" as the new extension to log out. Remember *LO = LOG OUT.
- » *74+EXT Single extension intercom two-way audio Remember *PG = PAGE;
- » *74+ Intercom all of the extensions in a group.
- » *75+ Page all of the extensions in a group.
- » *8 Answer the first ringing line. There is not a way to specify which ringing line to pick up.
- » *8# Used from an analog phone to answer the first ringing line. There is not a way to specify which ringing line to pick up.
- » *86+EXT Use this key code to transfer a call directly to the voicemail mailbox for the specified extension. Remember *VM = VOICE MAIL.